



2

ENGLISH

WAFFLE MAKER VT-2624

The waffle maker is intended for making waffles.

Description

1. Power indicator
2. Ready-to-cook indicator
3. Handles
4. Handle clip
5. Upper form
6. Lower form

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install an RCD, contact a specialist.

SAFETY MEASURES

Before using the electrical unit, read this instruction manual carefully and keep it for future reference. Use the unit for its intended purpose only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.
- The power cord is equipped with a europlug; plug it into the socket with a reliable grounding contact.
- Carefully pour the required amount of the preliminarily made liquid dough into the cavities of the lower form (6).
- Close the forms (5, 6), fix them with the clip (4).

Attention!

- Excess dough amount can prevent pressing the upper (5) and the lower (6) forms together, in this case it is necessary to remove the surplus dough and close the forms (5, 6).
- Beware of steam output from gaps between the operating forms; be careful, keep your hands and open parts of your body away from edges of the operating forms to avoid burns.
- Approximately in 1-2 minutes check the readiness of waffles by lifting the upper form (5), holding the handle (3). If the waffles are not ready yet, close the waffle maker and wait for a while.
- It is forbidden to use the unit in rooms where inflammable substances are stored or used.
- When the dough gets gold color remove the ready waffles carefully using a plastic or a wooden spatula.

ATTENTION! Take the waffles out of the unit right after you made them. Keeping waffles in the operating unit for a long time can burn them.

Note:

- Cooking time can change depending on the ingredients.
- Do not use sharp or metal objects (knives, metal spatulas etc.) to remove waffles from the forms, as this can damage the non-stick coating of the forms (5, 6).

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

• Before cleaning the unit let it cool down completely.

• Use a soft brush to remove the remaining dough.

Attention! To avoid electric shock, do not immerse the unit into water or any other liquids.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning.

