
Yealink

MB-Remote

Remote Controller

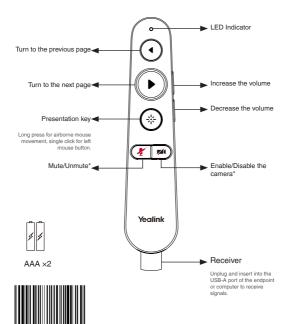

^{*} This feature is not supported when using a computer.

Pairing

The receiver and MB-Remote are pre-paired at the factory; simply insert it into the endpoint/computer to use.

If manual pairing is required, follow these steps:

- Long-press the page down and volume- keys simultaneously for 3 seconds; the green light will flash slowly.
- Insert the receiver into the endpoint/computer. Successful pairing results in the indicator light turning off, while pairing failure results in a fast-flashing red light.

Indicator Light Status

Light Status	Description
Green light flashing quickly	Pairing in progress
Red light flashing quickly	Pairing failed
Red light flashing slowly	Low battery

Operation Ambient Temperatures Operating temperature: +32 to 113°F (0 to 45°C)

Relative humidity: 5% to 90%, nor Storage temperature: -22 to +158°F (-30 to +70°C)

Our product warranty is limited only to the unit itself, when used normally in accordance with the operation instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for finar damages, lost profits, claims from third parties, etc., arising from the use of this product.

is the DC voltage symbol

Restriction of Hazardous Substances Directive (RoHS) This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Save these instructions. Read these safety instructions before usel The following basic safety precautions should always be followed to reduce risk of fire.

electrical shock, and other personal injury.

- A General Requirement . Before you install and use the device, read the safety instructions carefully and
 - observe the situation during operation. During the process of storage, transportation, and operation, please always keep.
 - the device dry and clean, avoid collision and crash. Please attempt not to dismantle the device by yourself. In case of any discrepancy.
 - please contact the appointed maintenance center for repair . Please refer to the relevant laws and statutes while using the device. Legal rights of

others should be respected as well.

A Environmental Requirement

- . Do not cover ventilation openings, this equipment is not intended to be used on soft
- The marking information is located at the ext Place the device at a well-ventilated place. Do not expose the device under directions are deviced to the device of the dev
- Keep the device dry and free of dusts Do not place the device on or near any inflammable or fire-vulnerable object, su
- as rubber-made materials. Keep the device away from any heat source or bare fire, such as a candle or an electric heater

Operating Requirements

- Do not let a child operate the device without guidance.
 - . Do not let a child play with the device or any accessory in case of accidental
 - Please use the accessories provided or authorized by the manufacturer of The power supply of the device shall meet the requirements of the input voltage of
- the device. Please use the provided surne neglection nower socket only . Before plugging or unplugging any cable, make sure that your hands are completely
- Do not spill liquid of any kind on the product or use the equipment near water, for
- example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming
- During a thunderstorm, stop using the device and disconnect it from the p supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted nair (the radio frequency nable) to quoid lightning strike.
- . If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smake emitted from the device or some abnormal noise or small. disconnect the device from the power supply, and unplug the power plug immediately
- . Contact the specified maintenance center for repair. . Do not insert any object into equipment slots that is not part of the product or
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

Cleaning Requirements

Use a piece of soft, dry and anti-static cloth to clean the device. Keep the pov plug clean and dry

Troubleshooting

The usage environ ment is out of operating temperature range

 Use in the operating temperature range The cable between the unit and the Yealink device is co 1. Connect the cable correctly

Some dust, etc., may be in the port 1. Clean the port.

ontact your dealer or authorized service facility for any further questions FCC CAUTION as with part 15 of the FCC Rules. Operation is subject to the following This device compl

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Regrient or relocate the receiving antenna.

Increase the separation between the equipment and receiver -Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experie enced radio/TV technician for hell The equipment complies with FCC radiation exposure limits set forth for an uncontrolled

This transmitter must not be co-located or operating in conjunction with any other antenna or

This device complies with Innovation, Science and Economic Development Canada licenceexempt RSS standardis). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interfere interference that may cause undesired operation of the device.

Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appare radio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout prouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le

This Class R rimital annaratus romniles with Canadian ICES.003 Catannarelly imérinue de la classe B estconformeà la norme NMB-003 du Canada. Les communications affactuées au moyen de cetannareil ne sont nes nécessairement

This riewine meets CS03 Part V This device meets the annilrable Innovation Science and Economic Devalopment

Canada technical specifications. / Ce produit répond à la innovation, des scie et de Dévelonnement économique Canada spécifications techniques applicables EU Regulatory Information ncy Bands and Power

Blugtooth 2.4 GHz < 20 dBm Contact Information

Made in China

YEALINK NETWORK TECHNOLOGY CO.,LTD No.666 Hu'an Rd, Huli District Xiamen City, Fujian, P.R. China YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Sir Wington Churchillo 299 k. 2288DC Riigwiik YEALINK (USA) NETWORK TECHNOLOGY CO., LTD 999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA