

# Edge Solo - User Manual



## 1. Introduction

Edge Solo is a high-quality single-capsule large-diaphragm condenser microphone by Antelope Audio. Combined with Antelope's cutting-edge modelling technology, it allows users to emulate 18 of the world's most iconic vintage microphones with uncanny accuracy. The Edge Solo features modelling that was performed in one of the most respected facilities in Germany using an exquisitely preserved collection of classic microphones.

## 2. Safety Notes

Phantom power – ensure phantom power supply is 48V.

## 3. Connecting EdgeSolo

The solo has a standard 3 pin XLR output so any microphone cable is sufficient for the job. Just connect the mic with one of the designated emulation-ready preamps and you are good to go.

## 4. Claim and assign features

Claiming features:

- Open [www.antelopeaudio.com](http://www.antelopeaudio.com) and click LOGIN.
- Enter your credentials and password
- Navigate to Claim Features
- Enter the voucher code ME\*\*\*\*\*, mark the check box on the End Users License Agreement and click "Claim"

Assigning features:

- Open the interfaces Control Panel and go to the Help tab (the "?" button)
- Open the Administration panel
- Mark "Register device and assign features" and continue
- Mark the checkbox with the Microphone Emulations and continue
- The device will restart, and your new Mic Emulations will be available.

## 5. Load a Mic Emulation in your Antelope Audio Interface.

Open the interface Control Panel and click on the little settings icon on the preamp gain control.

To have access to the mic settings, the input should be in Mic mode.



When you load a Mic Emulation the following screen will pop up.



Note: 48V Phantom power will be automatically enabled.

The following controls are available on the pop-up window once you choose the Edge Solo:



**Phase invert** – allows you to invert the polar pattern of the signal in the selected Mic input.



**Phantom power switch** – is switched on by default, when you're loading a Mic Emulation in the Antelope Audio interface Control Panel.



**Mode switch** – allows you to switch between Verge and Edge mic types or turn the emulation off.



**Emulation select** – here you can choose the exact model of the mic you wish to emulate.

## 6. Recording

In order to record the emulated signal, you must choose the following routing scheme.



## 7. Technical Specifications

**Microphone type:** Condenser microphone

**Diaphragm:** Large condenser, single-sided 6u gold-sputtered membrane

**Diaphragm diameter:** 34mm

**Polar pattern:** Cardioid (fixed)

**Freq.response:** 20HZ ~ 20KHZ

**Sensitivity:** -35dB | 18mV/Pa (-1 to +3dB)

THD+N: -116dB

**Self-noise:** 19dB(A)

**SNR:** 75dB(A)

**Output impedance:** 50 Ohms @ 1kHz

**Power requirements:** 48V DC Phantom Power

**Output connector:** 3-pin male XLR

**Color:** Black matte

**Package content**

**Breakout cable:** Not included (standard 3-pin XLR cable)

**Mount:** Hard mount included

**Case:** Standard small suitcase

**Can be transformed into a vintage replica via the Antelope Audio Mic Emulation Packs.**

**Vintage Mic Emulations:**

Berlin47 FT	BerlinV563 cardioid capsule
Berlin49T	Illinois57
Berlin57	Illinois7B
Berlin87	Minnesota20
Berlin67	Vienna112
BerlinM103	BerlinK86
Vienna12	Berlin47 TU
Vienna414	BerlinM251
Tokyo800T	Hamburg441