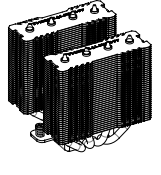
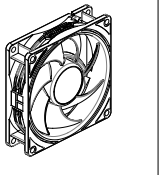
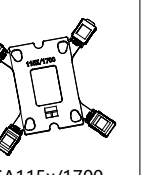
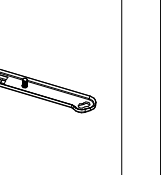
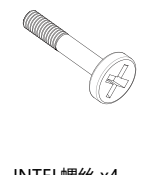

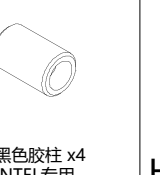
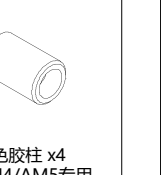
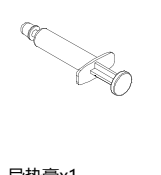
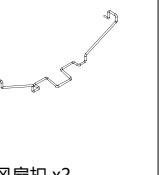
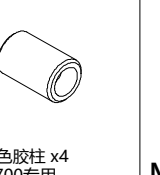



安装说明


PA90 SE系列

www.thermalright.com

配件清单

 A 散热器x1	 B 风扇x1	 C LGA115X/1700 背板 X1	 D INTEL支架 x2
 E INTEL螺丝 x4	 F AM4/AM5螺丝 x4	 G 黑色胶柱 x4 INTEL专用	 H 红色胶柱 x4 AM4/AM5专用
 J 导热膏x1	 K 风扇扣 x2	 L 蓝色胶柱 x4 1700专用	 M AMD/AM5支架 x2


AMD AM4/AM5

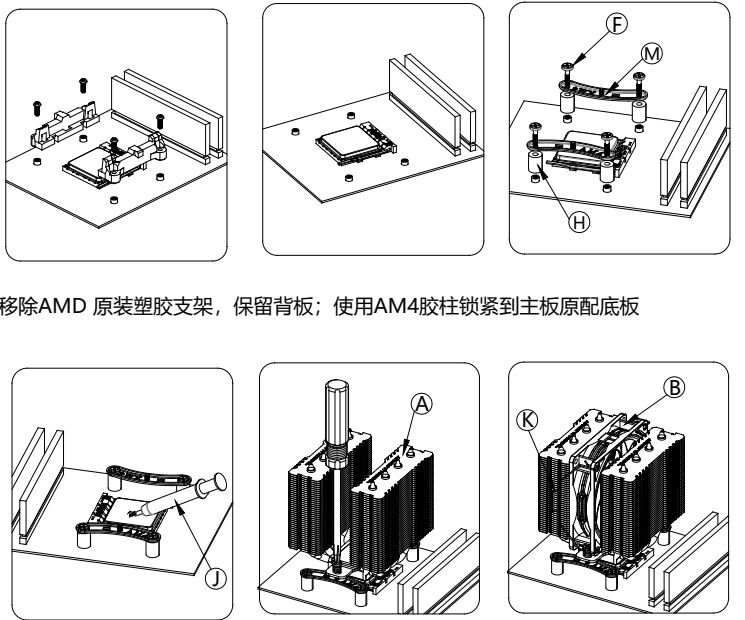

移除AMD 原装塑胶支架, 保留背板; 使用AM4胶柱锁紧到主板原配底板

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇


INTEL LGA115X/1200

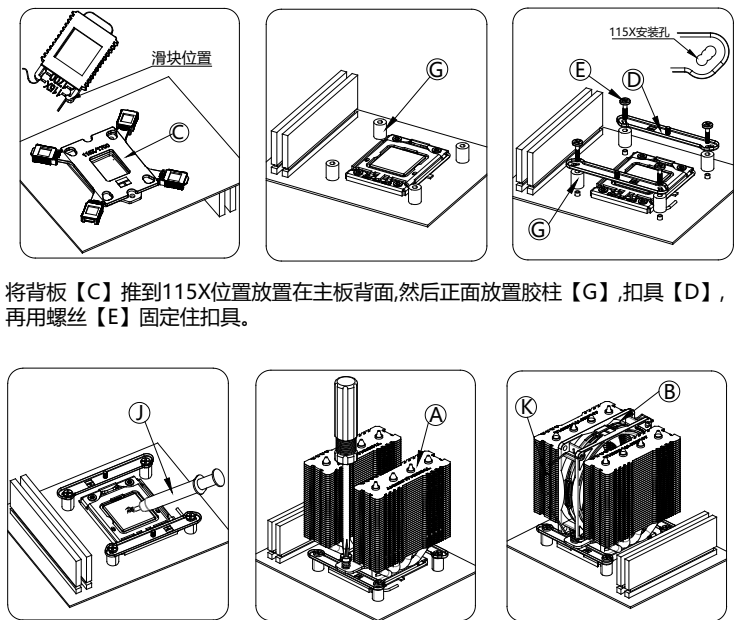

将背板【C】推到115X位置放置在主板背面,然后正面放置胶柱【G】,扣具【D】,再用螺丝【E】固定住扣具。

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇


INTEL LGA1700

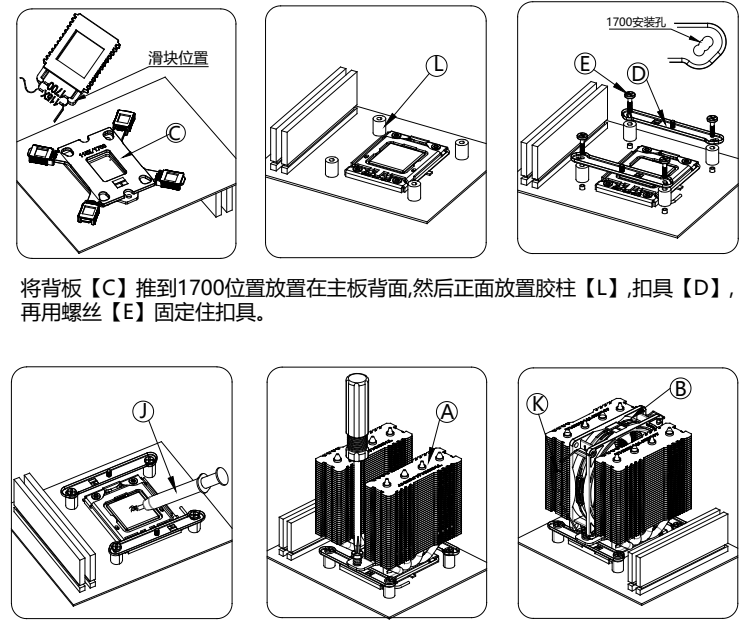


将背板【C】推到1700位置放置在主板背面,然后正面放置胶柱【L】,扣具【D】,再用螺丝【E】固定住扣具。

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

风扇接线

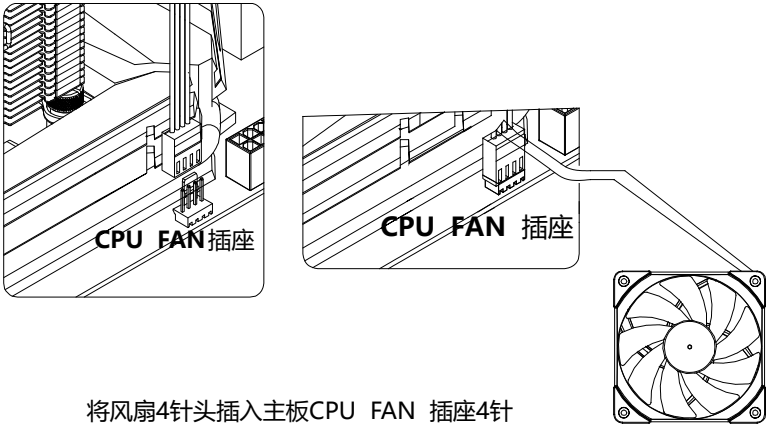

将风扇4针头插入主板CPU FAN 插座4针















INSTALLATION GUIDE


PA90 SE Series

www.thermalright.com

Parts list

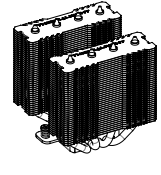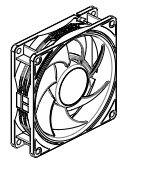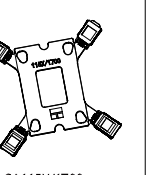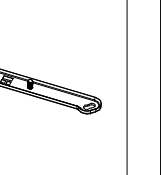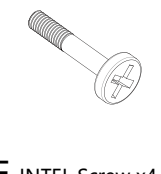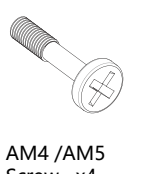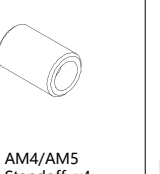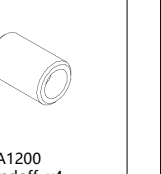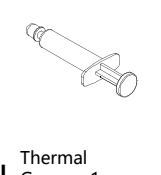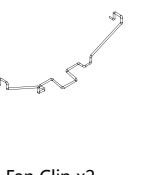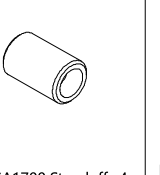 A Heatsinkx1	 B Fanx1	 C LGA115X/1700 Backplate x1	 D INTEL Bracket x2
 E INTEL Screw x4	 F AM4 /AM5 Screw x4	 G AM4/AM5 Standoff x4	 H LGA1200 Standoff x4
 J Thermal Greasa x1	 K Fan Clip x2	 L LGA1700 Standoff x4	 M AM4/AM5 Bracket x2


AMD AM4/AM5

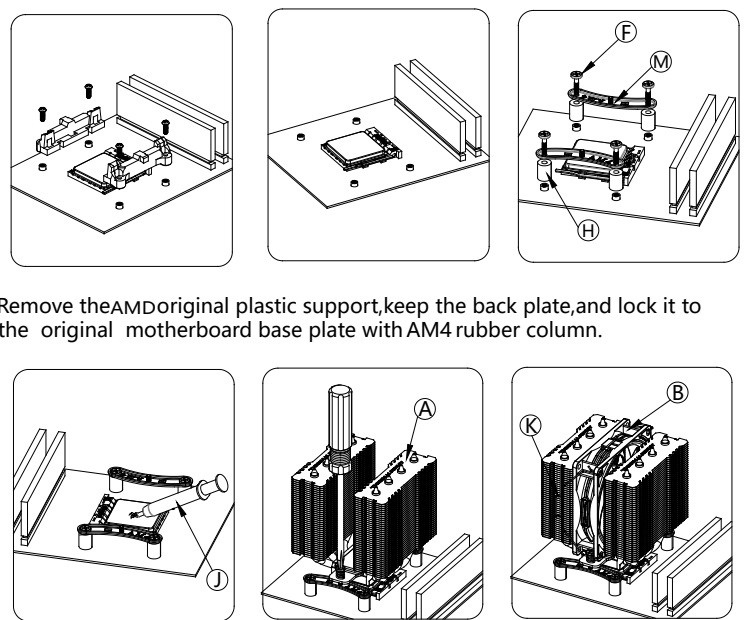

Remove theAMDoriginal plastic support,keep the back plate,and lock it to the original motherboard base plate with AM4 rubber column.

Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.


INTEL LGA115X/1200

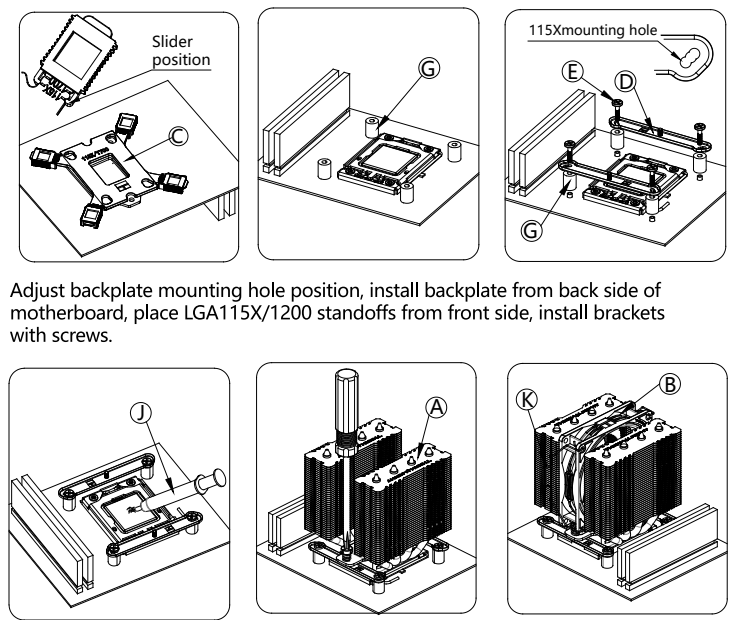

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA115X/1200 standoffs from front side, install brackets with screws.

Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.


INTEL LGA1700

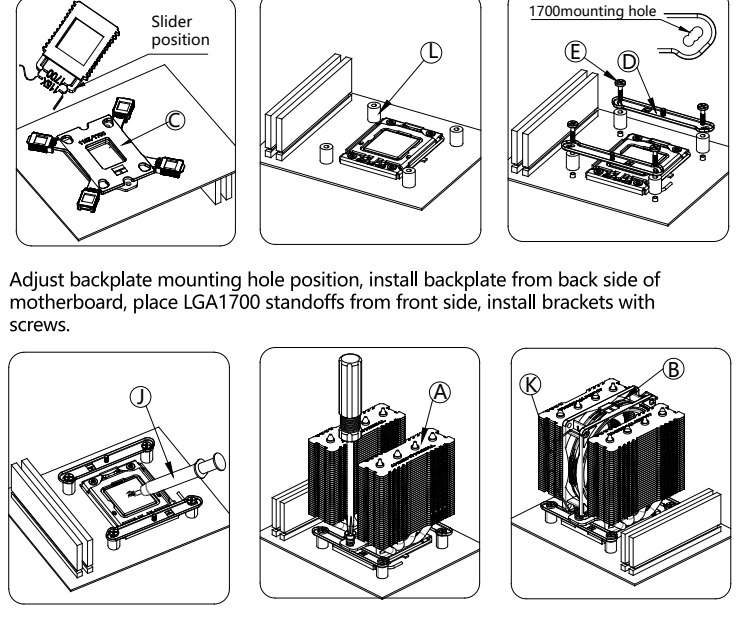

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA1700 standoffs from front side, install brackets with screws.

Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.

Fan wiring

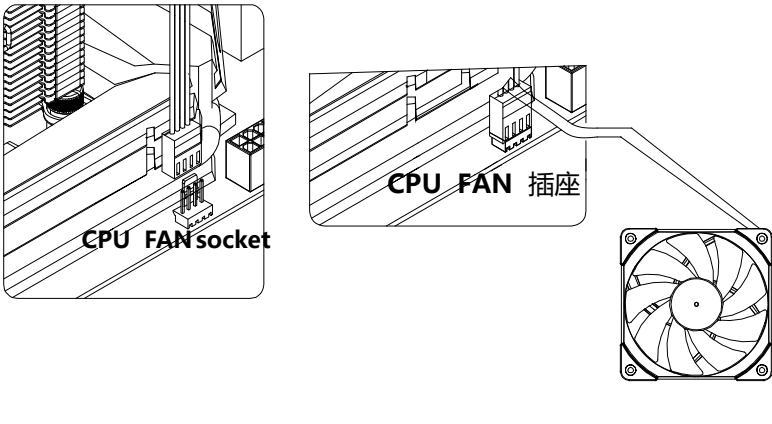

Insert the fan 4 pin into the main board CPU fan socket 4P